# LDP1602 LCD Module

## Snap-on module for the ioLogik E2200 and R2140



- > Hot-pluggable LCD module
- > Handy for IP display and configuration
- > Direct display for I/O status
- > No battery required (powered by device)



### : Installing the LCD Module

1. Remove the ioLogik's top cover.



3. Check and configure the IP address.



2. Plug in the LCD module.



4. Check IP and I/O status.



#### **Specifications**

**Environmental Limits** 

LCD Screen: 2 lines / 16 char. per line text display Operating Temperature: 0 to 55°C (32 to 131°F) Storage Temperature: -20 to 70°C (-4 to 158°F) Ambient Relative Humidity: 5 to 95% (non-condensing)

**Ordering Information** 

**Power Requirements** 

Power Consumption: 15 mA @ 24 VDC

Warranty

Warranty Period: 2 years

Note: Because of the limited lifetime of the LCD module it is only covered by a

2-year warranty.

**Available Models** 

LDP1602: LCD module with 2 lines / 16 char. per line text display and 5 control buttons