


1. Strip approximately 40mm of the cable jacket.

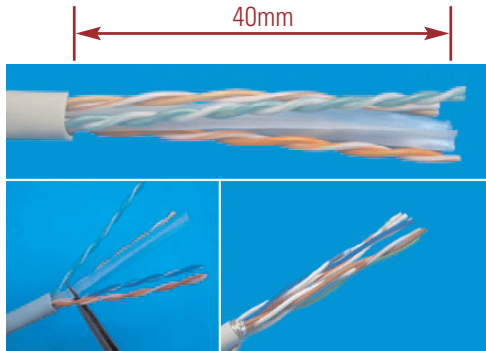

2. Follow the color-coding to position T568A or T568B wiring.


T568A

- Pin 1** White/Green
- Pin 2** Green
- Pin 3** White/Orange
- Pin 4** Blue
- Pin 5** White/Blue
- Pin 6** Orange
- Pin 7** White/Brown
- Pin 8** Brown


T568B

- Pin 1** White/Orange
- Pin 2** Orange
- Pin 3** White/Green
- Pin 4** Blue
- Pin 5** White/Blue
- Pin 6** Green
- Pin 7** White/Brown
- Pin 8** Brown


3. Follow the cap color code to place the wires into the cap slot. Make sure to keep the pairs twisted as long as possible.

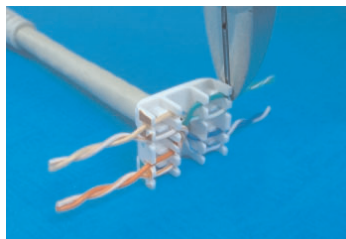

4. Follow the color sign to put the cap onto IDC.

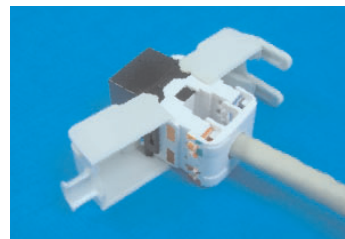


5. Lock the side caps with "CLICK" means successful connection.

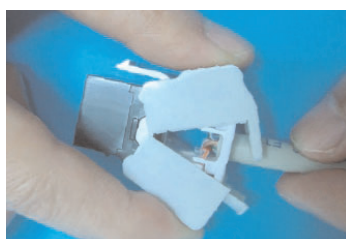

6. Tie up the cable and finish.



Unshield

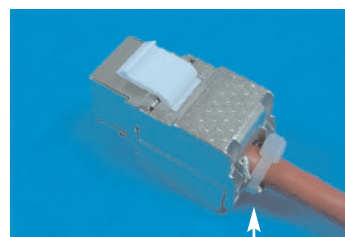

Shielded

connect the drain wire to the shielded shell