# S-10GR-STS Media Converters

perle.com/products/media-converters/10-gigabit-standalone-rate-converter.shtml

# 1G to 10G Fiber and Rate Converters

- Fiber to Fiber, copper to fiber and copper to copper conversion
- Conduct 1G to 10G rate conversion
- 2 empty slots that use a variety of transceivers supplied by Perle, Cisco or other MSA compliant SFPs
- Advanced features: Cut-Through Forwarding, Smart Link Pass-Through, Fiber Fault Alert, Built-in Link Test Generator and Loopback
- Support for Power Level 1 and 2
- Optical signal regeneration: 3R (re-amplify, reshape, and retime)



The Perle **S-10GR-STS Media Converter** transparently connects 1G and 10G Ethernet links over multimode or single mode fiber. Each Media Converter comes with two pluggable transceiver ports that support fiber to fiber, copper to fiber or copper to copper media conversion.

The S-10GR-STS Media Converter supports key features for ultimate network flexibility and growth.

- 1G and 10G rate conversion can be enabled to automatically detect Ethernet port speed and do a rate conversion between the two ports if the Ethernet speed is different. This is ideal in scenarios where disparate networks need to be connected.
- Cut-Through Forwarding can be configured for environments where throughput speed is critical. This will increase the media converter's throughput and reduce latency by performing packet forwarding in the most efficient manner possible.

Fiber to Fiber and Copper to Fiber conversion is achieved by inserting SFP or SFP+ fiber transceivers that support multimode and single-mode fiber, including CWDM/DWDM wavelengths. Copper to copper is achieved by inserting SFP or SFP+ Direct Attach Cable (DAC), also known as twinax, transceivers.

The two empty transceiver ports on the **S-10GR-STS Media Converters** allow for flexible network configurations to meet any requirement using a variety of transceivers supplied by Perle, Cisco or other manufacturers of MSA compliant SFPs. You can use the S-10GR-STS to convert:

### Copper to Fiber Conversion (1G and 10G)

- 1G Copper SFP to 1G Fiber SFP
- 1G Copper SFP/SFP+ to 10G Fiber SFP+

### Fiber to Fiber Conversion (1G and 10G)

- 1G Fiber SFP to 1G Fiber SFP
- 1G Fiber SFP to 10G Fiber SFP+
- 10G Fiber SFP+ to 10G Fiber SFP+

## Copper to Copper Conversion (1G and SGMII)

1G Copper SFP to 1G Copper SFP

The Perle S-10GR-STS Media Converter provides an economical path to extend Ethernet data transmission distances or convert network speeds. Network Administrators can "see-everything" with Perle's advanced features such as Smart Link Pass-Through, Fiber Fault Alert and Loopback. This allows for more efficient troubleshooting and less on-site maintenance. These cost and time saving features, along with a lifetime warranty and free worldwide technical support, make the Perle **S-10GR-STS Media Converter** the smart choice for IT professionals. If you need a Media Converter that can operate in a managed environment with AAA security, check out the SMI-10GR-STS.

# S-10GR-STS Media Converter Features

Rate Conversion	The Media Converter can automatically detect Ethernet port speed and do a rate conversion between the two ports if the Ethernet speed is different.
Cut-Through Forwarding	When the same Ethernet speed for both ports is enabled, the Media Converter can be configured for Cut-Through Forwarding. This will increase the media converter's throughput and reduce latency by performing packet forwarding in the most efficient manner possible. Forwarding of a packet will begin as soon as the destination address is processed.
SFP Speed Sensing	Automatically detects whether a SFP has been inserted and adjusts the speed accordingly
SGMII Interface Support	The Media Converter supports 1000Mbps SGMII SFPs on port 1.
Smart Link Pass- Through	When the Smart Link Pass-Through switch is enabled (default), each port will reflect the state of its port peer. In this mode, if a link loss is detected on one port, the transmit signal on the other port is disabled "passing through" the state of the failed link. This enables managed switches and other devices to report link failures to their network NMS.
	When the switch is in the down position, Smart Link Pass-Through is disabled. If a link loss is detected on one port, the transmit signal remains enabled on the other port.
Fiber Fault Alert	With Fiber Fault Alert the state of the 10 Gigabit Ethernet receiver is passed to the transmitter. This provides fault notification to the partner device attached to the 10G Ethernet interface of the media converter.
3R – Optical Signal Regeneration	Optical signal regeneration: 3R ( <b>R</b> e-amplify, <b>R</b> eshape, and <b>R</b> etime the signal ) ensures that there is a quality link at 10 Gigabit speeds.
Module Temperature Protection	Protects your DOM/DMI capable SFP or SFP+ module by monitoring its internal temperature and will automatically shut down the SFP or SFP+ if the module is operating above its maximum temperature threshold.
Gigabit SFP support	The 10 Gigabit media converter model with dual SFP+ slots can also support Gigabit (1000Base- X) SFPs. This allows users to use Gigabit SFPs today and migrate to 10G SFP+ in the future. Both slots must be populated with Gigabit SFPs.

Loopback       on the port in loopback mode will be transmitted back. This provides users with the capability of utilizing their own in-house test generators for testing the link.         Power       Power         Input Supply       9 - 30 vDC, unregulated (12 vDC Nominal)         Maximum       Power         Power       18.2 watts*         Consumption       3.0 watts         Transceiver power       5.5mm x 9.5mm x 2.1mm barrel socket         Connector       Power Adapter         Universal       100-240v AC, regulated AC/12v DC adapter included         AC/DC Adapter       Indicators         Power / TST       • On: Power indication and in normal operation         Power / TST       • On: Power indication and in normal operation         Blinking slowly: the unit has a hardware error specified by combination of LK1 and LK2         LK1, LK2       • On: Fiber link present         Blinking slowly: Fiber link disabled because the other fiber link went down.         Blinking slowly: Fiber link disabled because the other fiber link went down.         Blinking slowly: Fiber link disabled because the other fiber link went down.         Blinking slowly: Fiber link present on module inserted		
Power Strain Relief strap       A strain relief strap is provided to ensure a solid and secure power connection to the media converter. Ideal for areas that may be exposed to any vibration.         Remote Loopback       Capable of performing a loopback on each 10 Gigabit interface. In this mode, all frames received on the port in loopback mode will be transmitted back. This provides users with the capability of utilizing their own in-house test generators for testing the link.         Power       Power         Input Supply       9 - 30 vDC, unregulated (12 vDC Nominal)         Yoltage       18.2 watts*         Power       3.0 watts         Transceiver power       3.0 watts         Power       5.5mm x 9.5mm x 2.1mm barrel socket         Connector       Power Adapter         Universal AC/DC Adapter       100-240v AC, regulated AC/12v DC adapter included AC/DC Adapter         Power / TST       • On: Power indication and in normal operation • Blinking slowly: the unit is in loopback or test mode (either port) • Red solid: the unit has a hardware error specified by combination of LK1 and LK2         LK1, LK2       • On: Fiber link present • Blinking 1 sec on 3 sec off — module shut down due to high temperature. • Off: No fiber link present or no module inserted		Transparent to Jumbo Frames with a maximum MTU size of 10,024 bytes
Relief strap       converter. Ideal for areas that may be exposed to any vibration.         Remote Loopback       Capable of performing a loopback on each 10 Gigabit interface. In this mode, all frames received on the port in loopback mode will be transmitted back. This provides users with the capability of utilizing their own in-house test generators for testing the link.         Power       Power         Input Supply Voltage       9 - 30 vDC, unregulated (12 vDC Nominal)         Maximum Power       18.2 watts*         Consumption       3.0 watts         Transceiver power       3.0 watts         Power       5.5mm x 9.5mm x 2.1mm barrel socket         Connector       Power Adapter         Universal AC/DC Adapter       100-240v AC, regulated AC/12v DC adapter included AC/DC Adapter         Power / TST       • On: Power indication and in normal operation • Blinking slowly: the unit is in loopback or test mode (either port) • Red solid: the unit has a hardware error specified by combination of LK1 and LK2         LK1, LK2       • On: Fiber link present • Blinking slowly: Fiber link present and receiving data.(including test data) • Blinking slowly: Fiber link present or no module inserted	VLAN	Transparent to VLAN tagged packets.
Loopback       on the port in loopback mode will be transmitted back. This provides users with the capability of utilizing their own in-house test generators for testing the link.         Power       Power         Input Supply       9 - 30 vDC, unregulated (12 vDC Nominal)         Maximum       18.2 watts*         Power       18.2 watts*         Consumption       3.0 watts         Transceiver power       5.5mm x 9.5mm x 2.1mm barrel socket         Connector       Power Adapter         Universal       100-240v AC, regulated AC/12v DC adapter included         AC/DC Adapter       Indicators         Power / TST       • On: Power indication and in normal operation         • Blinking slowly: the unit is a hardware error specified by combination of LK1 and LK2         LK1, LK2       • On: Fiber link present         • Blinking slowly: Fiber link disabled because the other fiber link went down.         • Blinking slowly: Fiber link disabled because the other fiber link went down.         • Blinking slowly: Fiber link present on module inserted		
Input Supply       9 - 30 vDC, unregulated (12 vDC Nominal )         Maximum       18.2 watts*         Power       Consumption         Total       3.0 watts         Transceiver       supports         Power       5.5mm x 9.5mm x 2.1mm barrel socket         Connector       5.5mm x 9.5mm x 2.1mm barrel socket         Onnector       100-240v AC, regulated AC/12v DC adapter included         AC/DC       Adapter         Power / TST       • On: Power indication and in normal operation         Blinking slowly: the unit is in loopback or test mode (either port)       • Red solid: the unit has a hardware error (upon power up)         • Red solid: the unit has a hardware error specified by combination of LK1 and LK2       Universet         LK1, LK2       • On: Fiber link present       • Blinking slowly: Fiber link disabled because the other fiber link went down.         • Blinking slowly: Fiber link disabled because the other fiber link went down.       • Blinking slowly: Fiber link disabled because the other fiber link went down.         • Blinking slowly: Fiber link disabled because the other fiber link went down.       • Off: No fiber link present or no module inserted		
Voltage       18.2 watts*         Power Consumption       18.2 watts*         Total Transceiver power supports       3.0 watts         Power Connector       5.5mm x 9.5mm x 2.1mm barrel socket         Power Adapter       Power Adapter         Universal AC/DC Adapter       100-240v AC, regulated AC/12v DC adapter included         Power / TST       • On: Power indication and in normal operation • Blinking slowly: the unit is in loopback or test mode (either port) • Red solid: the unit has a hardware error specified by combination of LK1 and LK2         LK1, LK2       • On: Fiber link present • Blinking slowly: Fiber link disabled because the other fiber link went down. • Blinking 1 sec on 3 sec off – module shut down due to high temperature. • Off: No fiber link present or no module inserted		Power
Power       3.0 watts         Total       3.0 watts         Transceiver       supports         Power       5.5mm x 9.5mm x 2.1mm barrel socket         Connector       5.5mm x 9.5mm x 2.1mm barrel socket         Dower Adapter       100-240v AC, regulated AC/12v DC adapter included         AC/DC       Adapter         Universal AC/DC       100-240v AC, regulated AC/12v DC adapter included         Power / TST       On: Power indication and in normal operation         Blinking slowly: the unit is in loopback or test mode (either port)       Red solid: the unit has a hardware error (upon power up)         Red and blinking: the unit has a hardware error specified by combination of LK1 and LK2       Unix Fiber link present and receiving data.(including test data)         Blinking slowly: Fiber link disabled because the other fiber link went down.       Blinking 1 sec on 3 sec off – module shut down due to high temperature.         Off: No fiber link present or no module inserted       Off: No fiber link present or no module inserted		9 - 30 vDC, unregulated ( 12 vDC Nominal )
Transceiver         power         supports         5.5mm x 9.5mm x 2.1mm barrel socket         Connector         5.5mm x 9.5mm x 2.1mm barrel socket         Power Adapter         Universal         AC/DC         Adapter         100-240v AC, regulated AC/12v DC adapter included         AC/DC         Adapter         Power / TST         • On: Power indication and in normal operation         • Blinking slowly: the unit is in loopback or test mode (either port)         • Red solid: the unit has a hardware error (upon power up)         • Red and blinking: the unit has a hardware error specified by combination of LK1 and LK2         LK1, LK2       • On: Fiber link present         Blinking quickly: Fiber link present and receiving data.(including test data)         Blinking slowly: Fiber link disabled because the other fiber link went down.         • Blinking 1 sec on 3 sec off – module shut down due to high temperature.         • Off: No fiber link present or no module inserted	Power	18.2 watts*
Connector         Power Adapter         Universal AC/DC Adapter       100-240v AC, regulated AC/12v DC adapter included         Indicators         Power / TST       • On: Power indication and in normal operation         • Blinking slowly: the unit is in loopback or test mode (either port)         • Red solid: the unit has a hardware error (upon power up)         • Red and blinking: the unit has a hardware error specified by combination of LK1 and LK2         LK1, LK2       • On: Fiber link present         • Blinking guickly: Fiber link present and receiving data.(including test data)         • Blinking 1 sec on 3 sec off – module shut down due to high temperature.         • Off: No fiber link present or no module inserted	Transceiver power	3.0 watts
Universal AC/DC Adapter       100-240v AC, regulated AC/12v DC adapter included         Indicators       Indicators         Power / TST       On: Power indication and in normal operation         Blinking slowly: the unit is in loopback or test mode (either port)         Red solid: the unit has a hardware error (upon power up)         Red and blinking: the unit has a hardware error specified by combination of LK1 and LK2         LK1, LK2       On: Fiber link present         Blinking glowly: Fiber link present and receiving data.(including test data)         Blinking 1 sec on 3 sec off – module shut down due to high temperature.         Off: No fiber link present or no module inserted		5.5mm x 9.5mm x 2.1mm barrel socket
AC/DC Adapter       Indicators         Power / TST       • On: Power indication and in normal operation • Blinking slowly: the unit is in loopback or test mode (either port) • Red solid: the unit has a hardware error (upon power up) • Red and blinking: the unit has a hardware error specified by combination of LK1 and LK2         LK1, LK2       • On: Fiber link present • Blinking quickly: Fiber link present and receiving data.(including test data) • Blinking slowly: Fiber link disabled because the other fiber link went down. • Blinking 1 sec on 3 sec off – module shut down due to high temperature. • Off: No fiber link present or no module inserted		Power Adapter
<ul> <li>Power / TST</li> <li>On: Power indication and in normal operation         <ul> <li>Blinking slowly: the unit is in loopback or test mode (either port)</li> <li>Red solid: the unit has a hardware error (upon power up)</li> <li>Red and blinking: the unit has a hardware error specified by combination of LK1 and LK2</li> </ul> </li> <li>LK1, LK2</li> <li>On: Fiber link present         <ul> <li>Blinking quickly: Fiber link present and receiving data.(including test data)</li> <li>Blinking slowly: Fiber link disabled because the other fiber link went down.</li> <li>Blinking 1 sec on 3 sec off – module shut down due to high temperature.</li> <li>Off: No fiber link present or no module inserted</li> </ul> </li> </ul>	AC/DC	100-240v AC, regulated AC/12v DC adapter included
<ul> <li>Blinking slowly: the unit is in loopback or test mode (either port)</li> <li>Red solid: the unit has a hardware error (upon power up)</li> <li>Red and blinking: the unit has a hardware error specified by combination of LK1 and LK2</li> <li>UK1, LK2</li> <li>On: Fiber link present</li> <li>Blinking quickly: Fiber link present and receiving data.(including test data)</li> <li>Blinking slowly: Fiber link disabled because the other fiber link went down.</li> <li>Blinking 1 sec on 3 sec off – module shut down due to high temperature.</li> <li>Off: No fiber link present or no module inserted</li> </ul>		Indicators
<ul> <li>Blinking quickly: Fiber link present and receiving data.(including test data)</li> <li>Blinking slowly: Fiber link disabled because the other fiber link went down.</li> <li>Blinking 1 sec on 3 sec off – module shut down due to high temperature.</li> <li>Off: No fiber link present or no module inserted</li> </ul>	Power / TST	<ul> <li>Blinking slowly: the unit is in loopback or test mode (either port)</li> <li>Red solid: the unit has a hardware error (upon power up)</li> </ul>
	LK1, LK2	<ul> <li>Blinking quickly: Fiber link present and receiving data.(including test data)</li> <li>Blinking slowly: Fiber link disabled because the other fiber link went down.</li> <li>Blinking 1 sec on 3 sec off – module shut down due to high temperature.</li> </ul>
Switches - accessible through a side opening in the chassis		Switches - accessible through a side opening in the chassis

Smart Link Pass-Through	<ul><li>Enabled (Default - Up)</li><li>When the Smart Link Pass-Through switch is enabled (default), each port will reflect the state of its port peer. In this mode, if a link loss is detected on one port, the transmit signal on the other port is disabled "passing through" the state of the failed link. This enables managed switches and other devices to report link failures to their network NMS.</li><li>When the switch is in the down position, Smart Link Pass-Through is disabled. If a link loss is detected on one port, the transmit signal remains enabled on the other port.</li></ul>
Fiber Fault Alert	<i>Enabled (Default - Up)</i> With Fiber Fault Alert the state of the 10 Gigabit ethernet receiver is passed to the transmitter. This provides fault notification to the partner device attached to the 10G ethernet interface of the media converter.
Cut-through / Rate converting	Rate Converting (Default - Up) The Media Converter can automatically detect Ethernet port speed and do a rate conversion between the two ports if the Ethernet speed is different.
	When the same Ethernet speed for both ports is enabled, the Media Converter can be configured for Cut-Through Forwarding. This will increase the media converter's throughput and reduce latency by performing packet forwarding in the most efficient manner possible. Forwarding of a packet will begin as soon as the destination address is processed
Fiber Interface Loopback	<i>Disable (Default - Up)</i> When enable, the media converter will be in fiber loopback mode. In this mode all frames received on the fiber port will be transmitted back. This provides users with the capability of utilizing their own in-house test generators for testing the link
Loopback Interface	<i>Port 1(Default - Up)</i> In this mode, all frames received on the fiber port 1 in loopback mode will be transmitted back. When switch is set down, port 2 will be in loopback mode and transmitting all frames received back.
	Connectors – Two SFP / SFP+ Transceiver Slots. Hot insertion and removable.
Supported 10 Gigabit Fiber SFP+ Transceivers	Power Levels 1 and 2 IEEE 802.3ae compliant: • 10GBase-SR • 10GBase-LRM • 10GBase-LR • 10GBase-ER • 10GBase-ZR
	CWDM/DWDM
Supported 1	1000Base-T
Gigabit Copper SFPs	1000Base-T SGMII

Supported Gigabit Fiber	Standard SFP Power level 1 (1 watt) and level 2 (1.5 watts) as per SFP-8431
SFPs	1000Base-SX
	1000Base-LX/LH
	1000Base-EX
	1000Base-ZX
	1000Base-BX
	CWDM/DWDM

## **Environmental Specifications**

Operating Temperature	0° C to 50° C (32° F to 122° F)
Storage Temperature	minimum range of -25° C to 70° C (-13° F to 158° F)
Operating Humidity	5% to 90% non-condensing
Storage Humidity	5% to 95% non-condensing
Operating Altitude	Up to 3,048 meters (10,000 feet)
Heat Output	62
(BTU/HR)	
MTBF (Hours)	Without power adaptor: 115,765 With power adaptor: 88,506
	Calculation model based on MIL-HDBK-217-FN2 @ 30 °C
Chassis	Metal with an IP20 ingress protection rating
	Mounting
Din Rail Kit	Optional
Wall / Rack Mount Kit	Optional
	Product Weight and Dimensions
Product Weight	0.36 kg, 0.80 lbs
Product Dimensions	8 x 12 x 4.2 cm (3.1 x 4.7 x 1.7 inches)

Shipping Weight	0.64 kg, 1.41 lbs
Shipping Dimensions	26 x 17 x 7 cm (10.2 x 6.7 x 2.8 inches)
	Regulatory Approvals
Emissions	FCC Part 15 Class A, EN55022 Class A
	CISPR 22 Class A
	CISPR 32:2015/EN 55032:2015 (Class A)
	CISPR 24:2010/EN 55024:2010
	EN61000-3-2
Immunity	EN55024
Electrical	UL 60950-1
Safety	IEC 60950-1(ed 2); am1, am2
	EN 60950-1:2006+A11:2009+A1:2010+A12:2011+A2:2013
	CE
Laser Safety	Dependent on SFPs used. SFPs that meet Class 1 Laser safety requirements per IEC-60825 FDA/CDRH standards and comply with 21CFR1040.10 and 21CFR1040.11 are recommended for use with this product.
Environmental	Reach, RoHS and WEEE Compliant
Other	ECCN: 5A991
	HTSUS Number: 8517.62.0050

\*Maximum rating for both media converter and modules inserted. Actual rating is dependent on the power consumption of the SFP or SFP+ modules inserted.

## 1G to 10 Gigabit Rate Conversion

#### Copper to Fiber or Fiber to Fiber Rate Conversion


Using the dual SFP slots, convert 1G copper to 10G multimode or single mode fiber. Or, convert 1G fiber to 10G fiber.



### **10 Gigabit Ethernet Fiber Repeater**

#### Extend the network distance of 10 Gigabit Fiber Links

Create a 10 Gigabit Ethernet fiber link that can extend up to 160km.

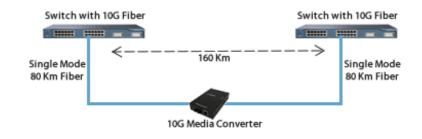

**10 Gigabit Ethernet Fiber Extender** 

#### Extend the network distance between two Fiber Switches

Extend the distance between 10 Gigabit Multimode Switches across a Single Mode fiber link up to 80km in length.

